

1



2

If you want to send the First Digit of the UPC-A Number then Scan:



UPC-A NUMBER SYSTEM CHARACTER TRANSMISSION = ENABLE

3

If you want to send the Last Digit of the UPC-A Number then Scan:



UPC-A CHECK CHARACTER TRANSMISSION = ENABLE

4

